
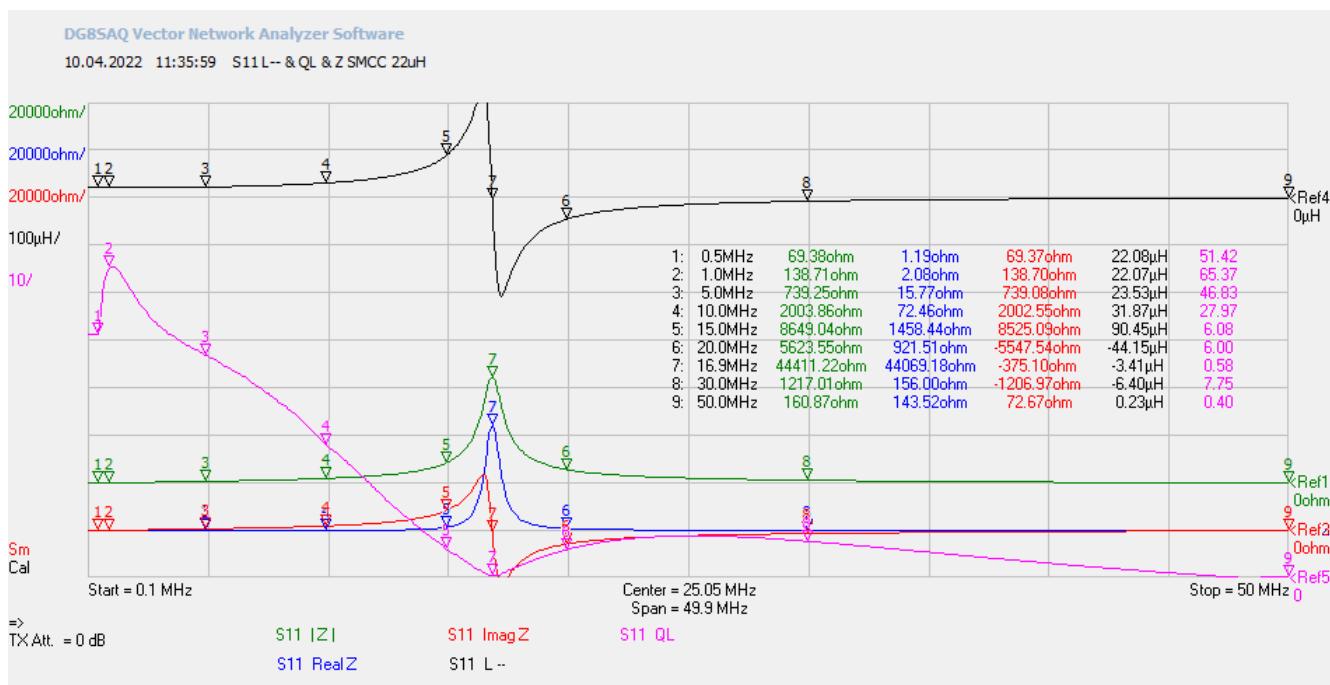




VNWA-Plots S11-Measurements chokes & T-Toroids

DG1KPN & DL6GL

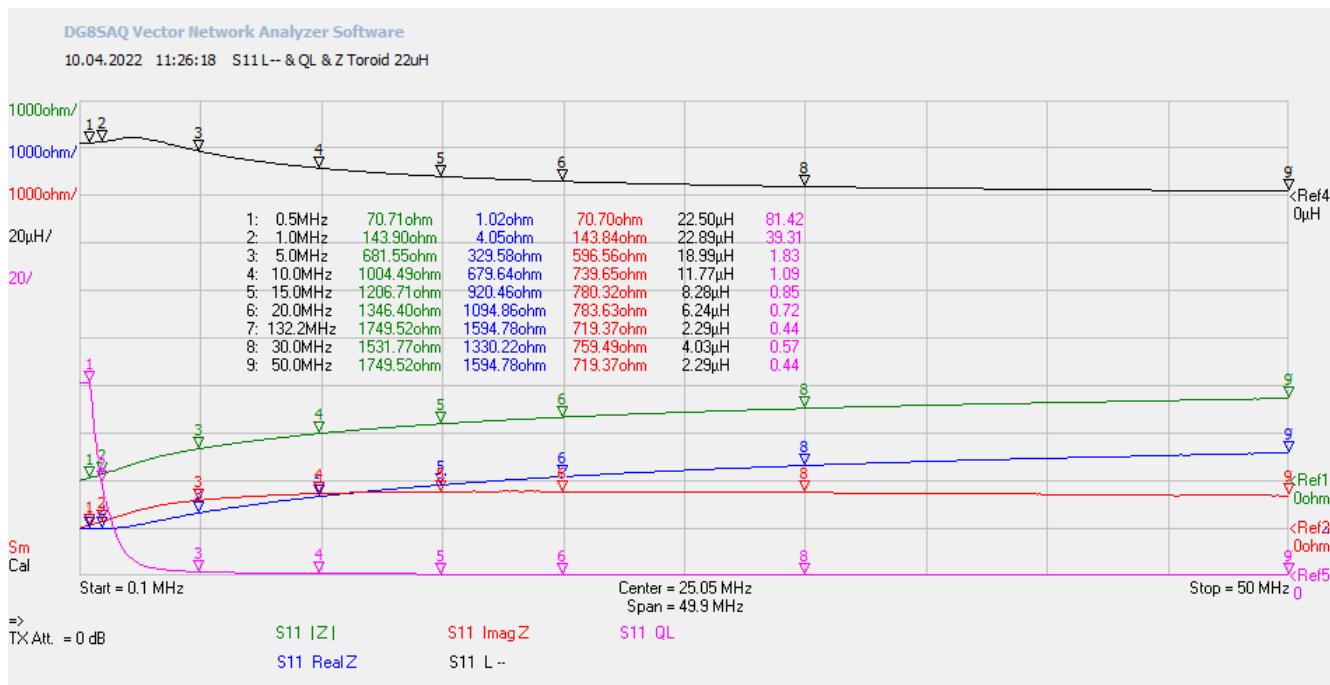



VNWA-Plots S11-Measurements chokes & T-Toroids

DG1KPN & DL6GL

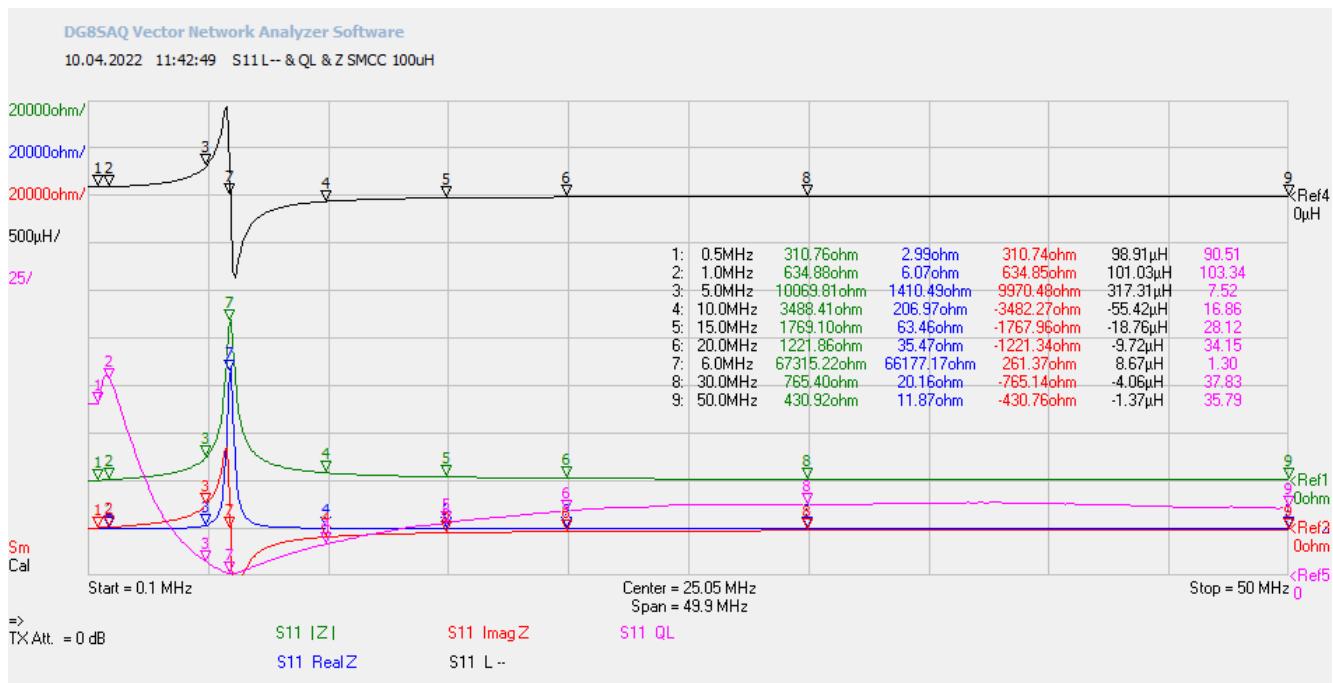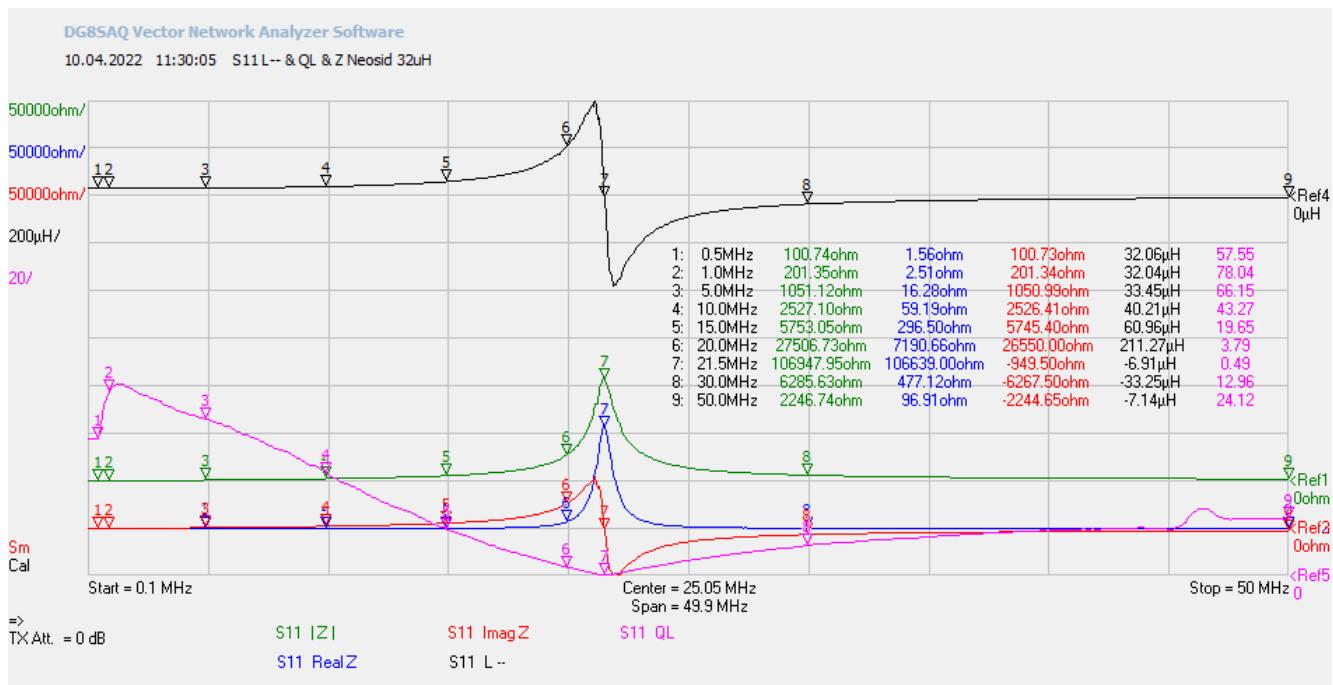



VNWA-Plots S11-Measurements chokes & T-Toroids

DG1KPN & DL6GL

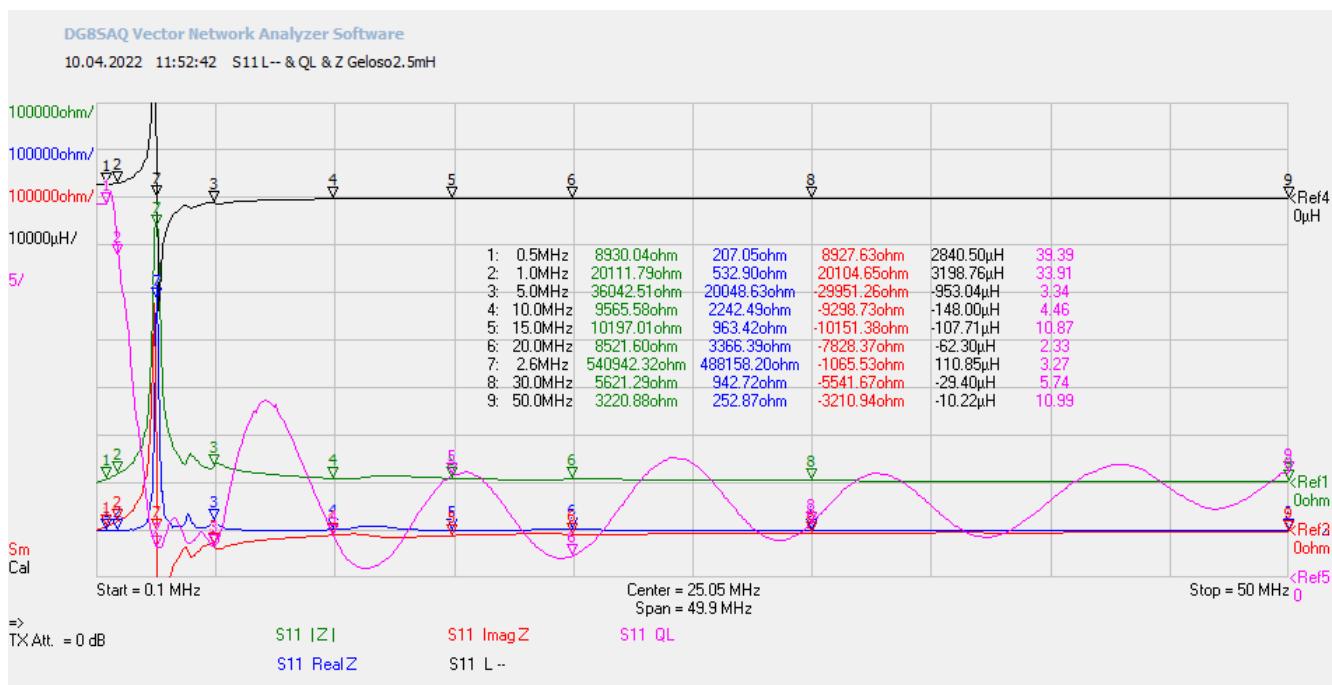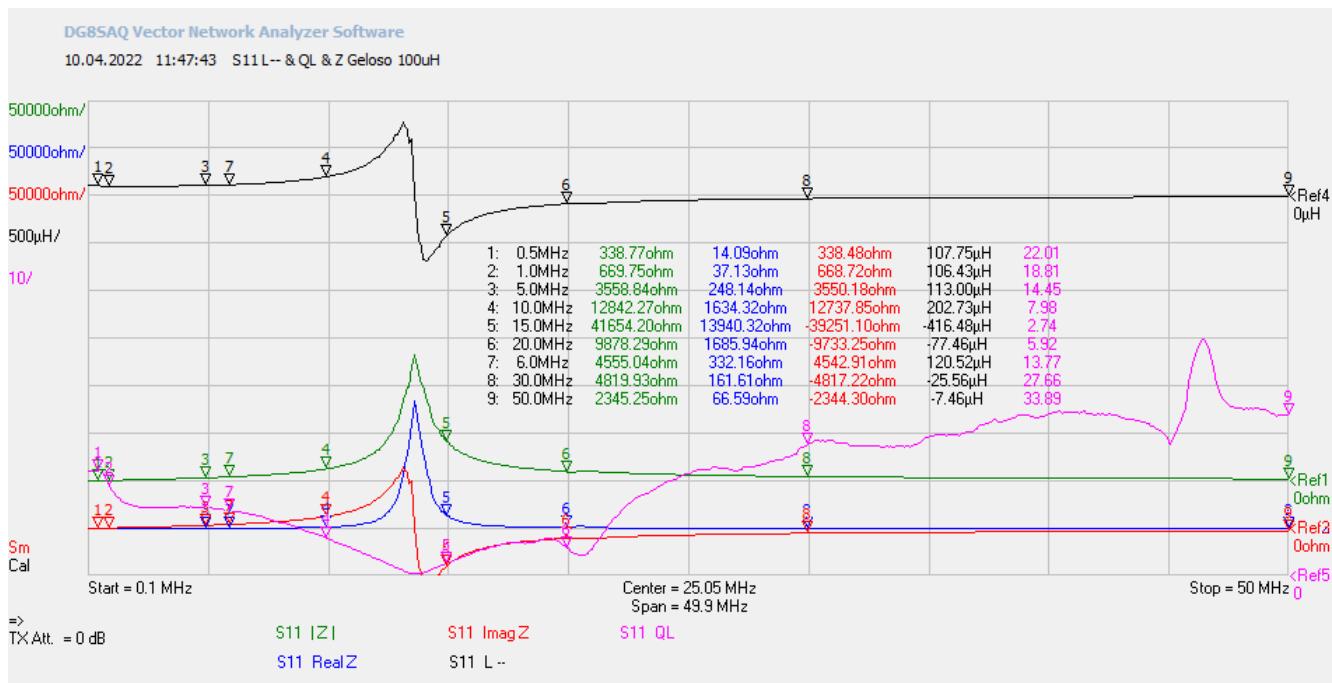



VNWA-Plots S11-Measurements chokes & T-Toroids

DG1KPN & DL6GL

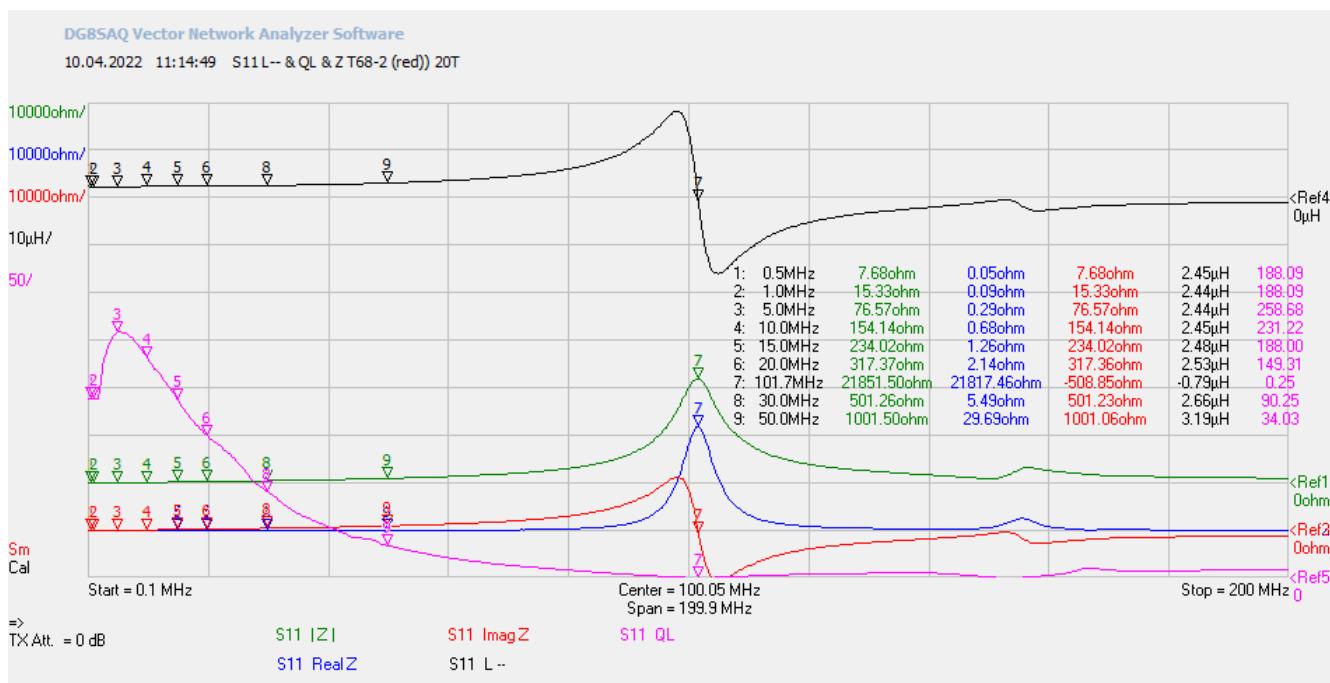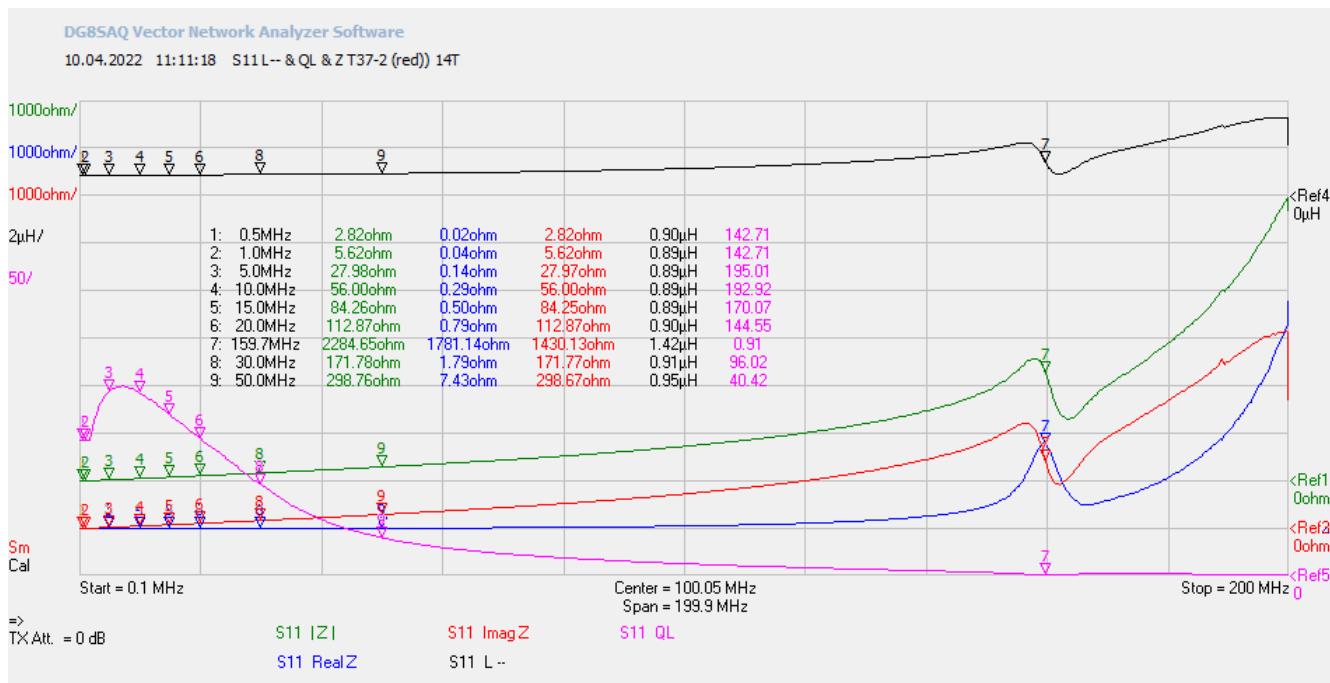



VNWA-Plots S11-Measurements chokes & T-Toroids

DG1KPN & DL6GL

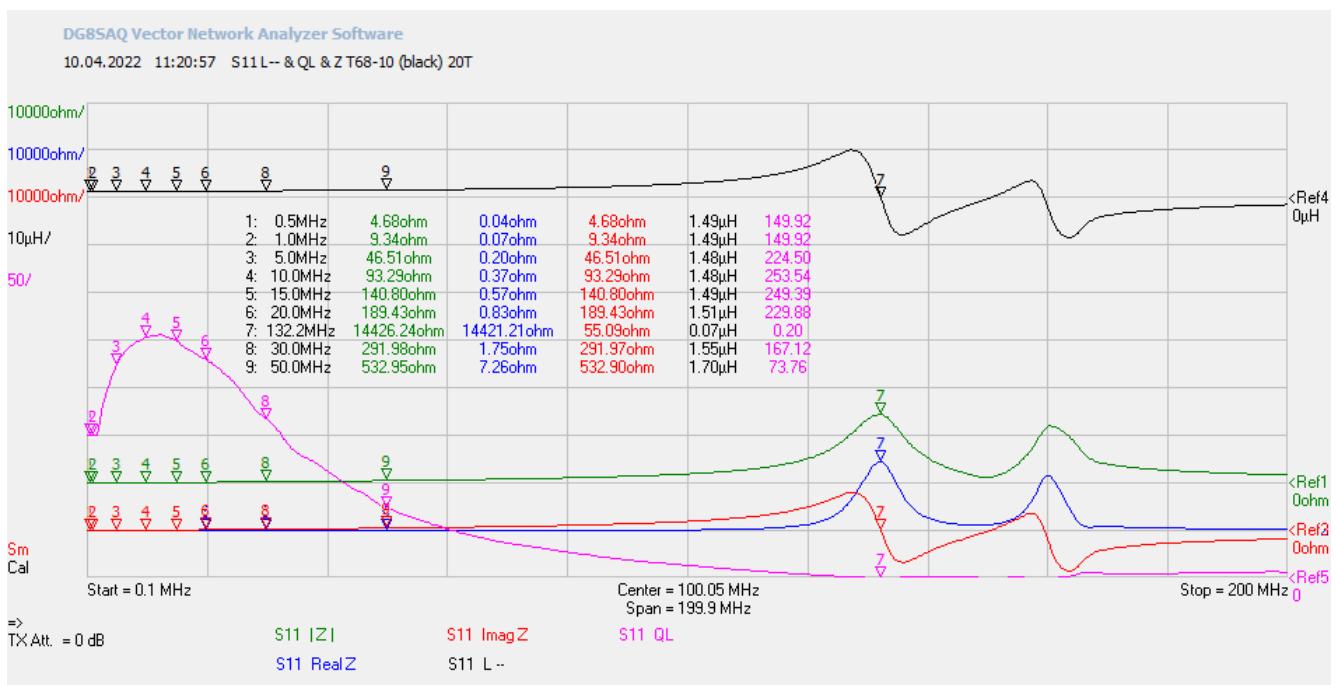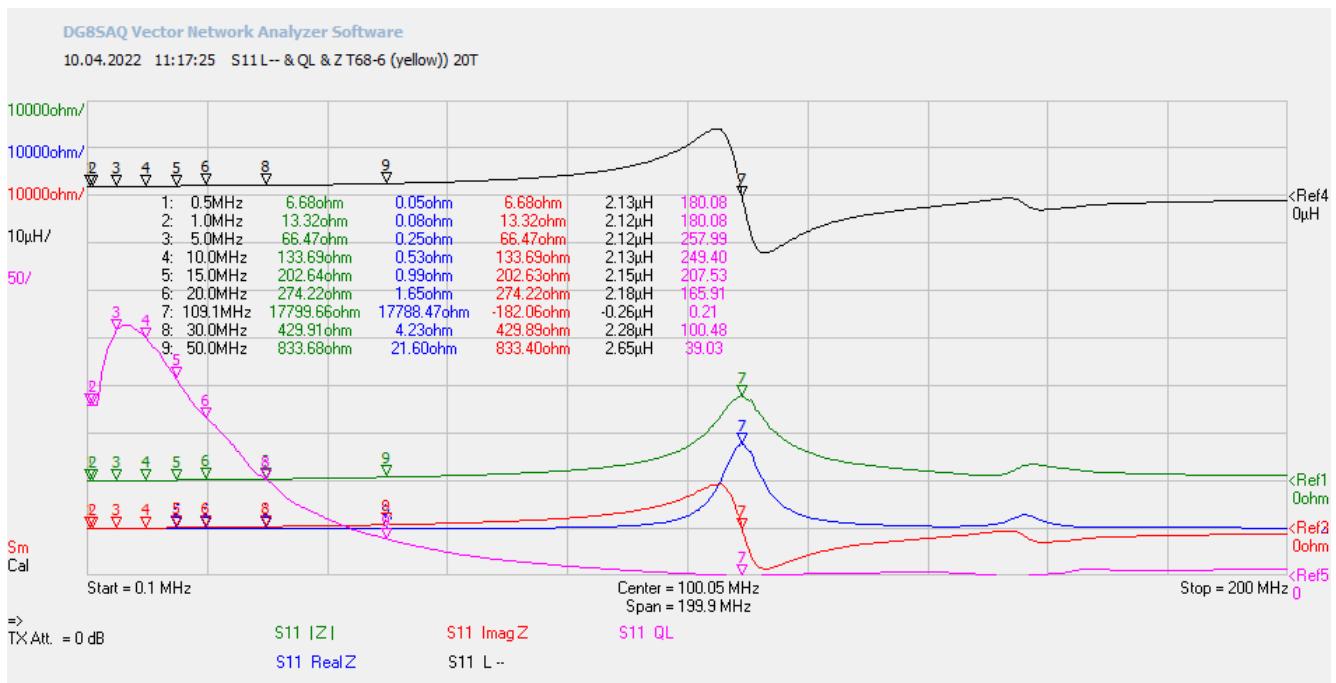



VNWA-Plots S21-Measurements chokes & T-Toroids

DG1KPN & DL6GL

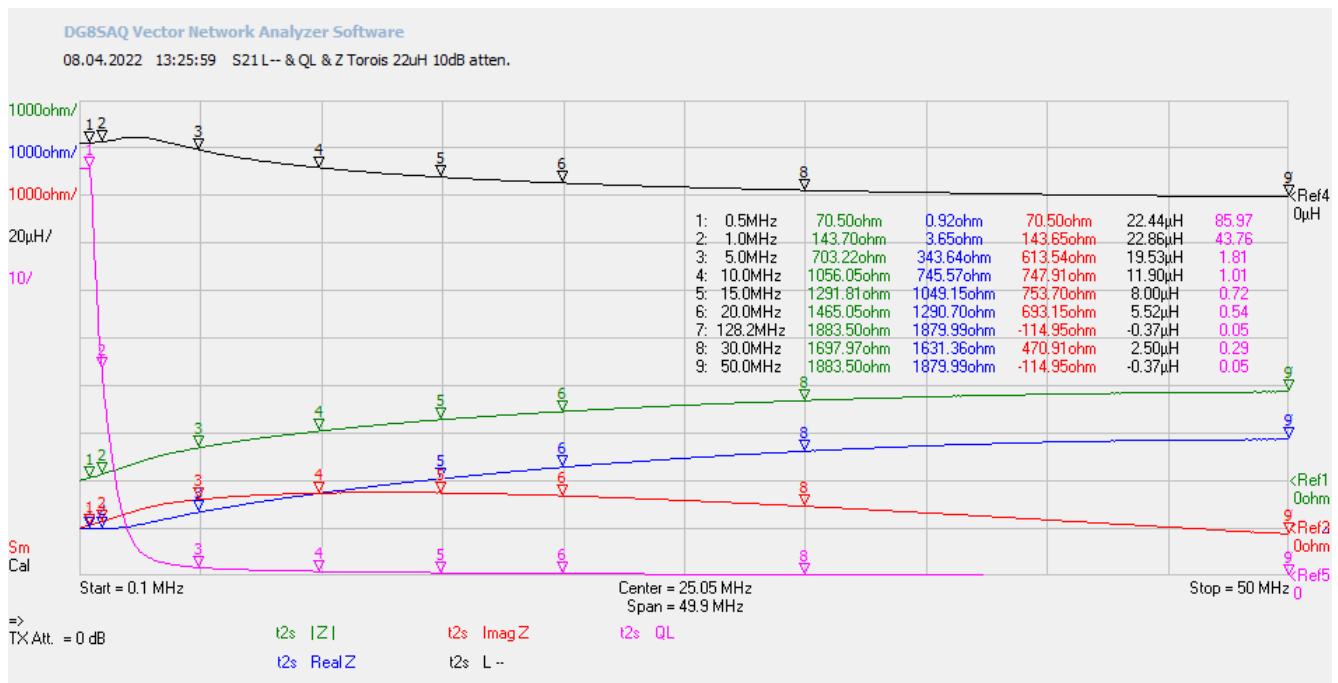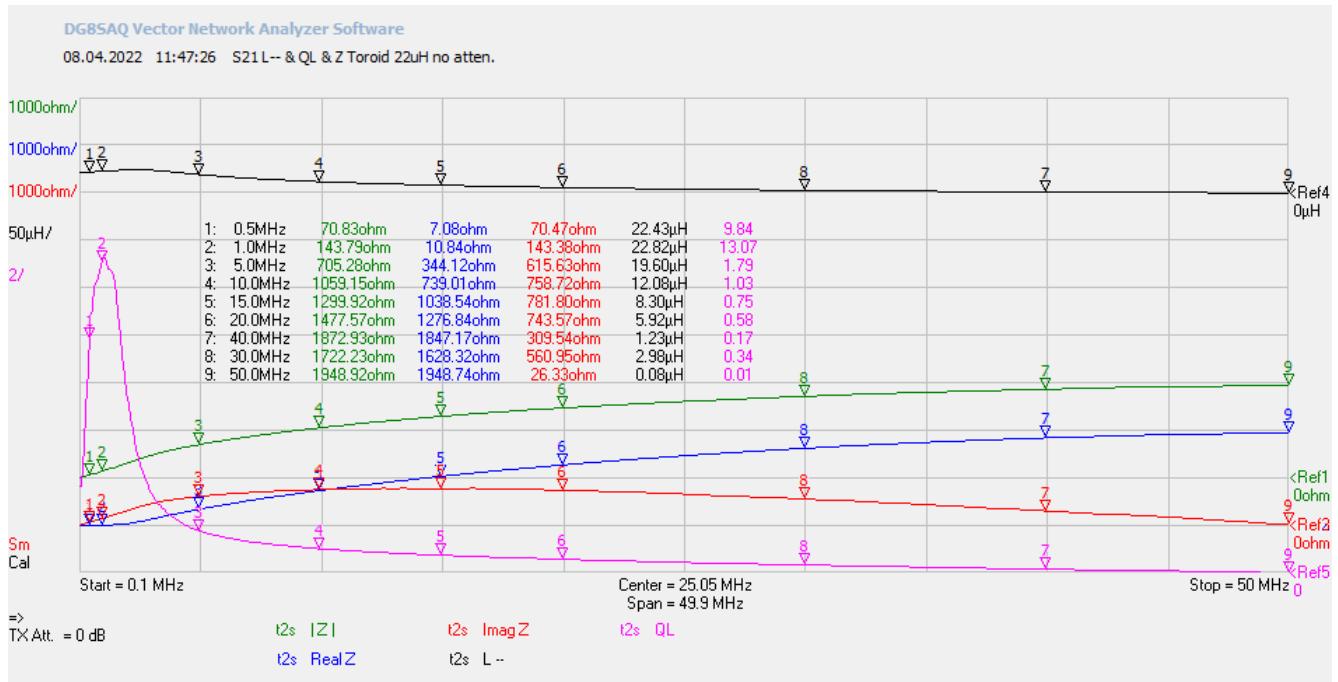



VNWA-Plots S21-Measurements chokes & T-Toroids

DG1KPN & DL6GL

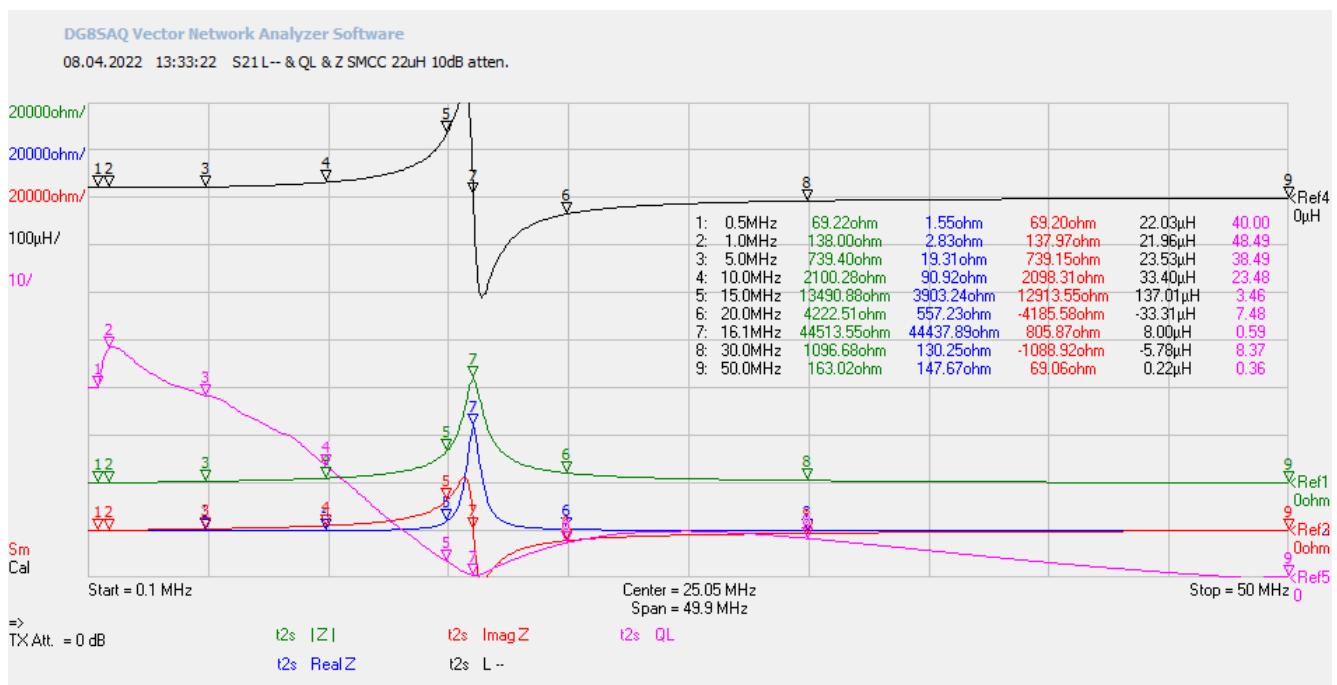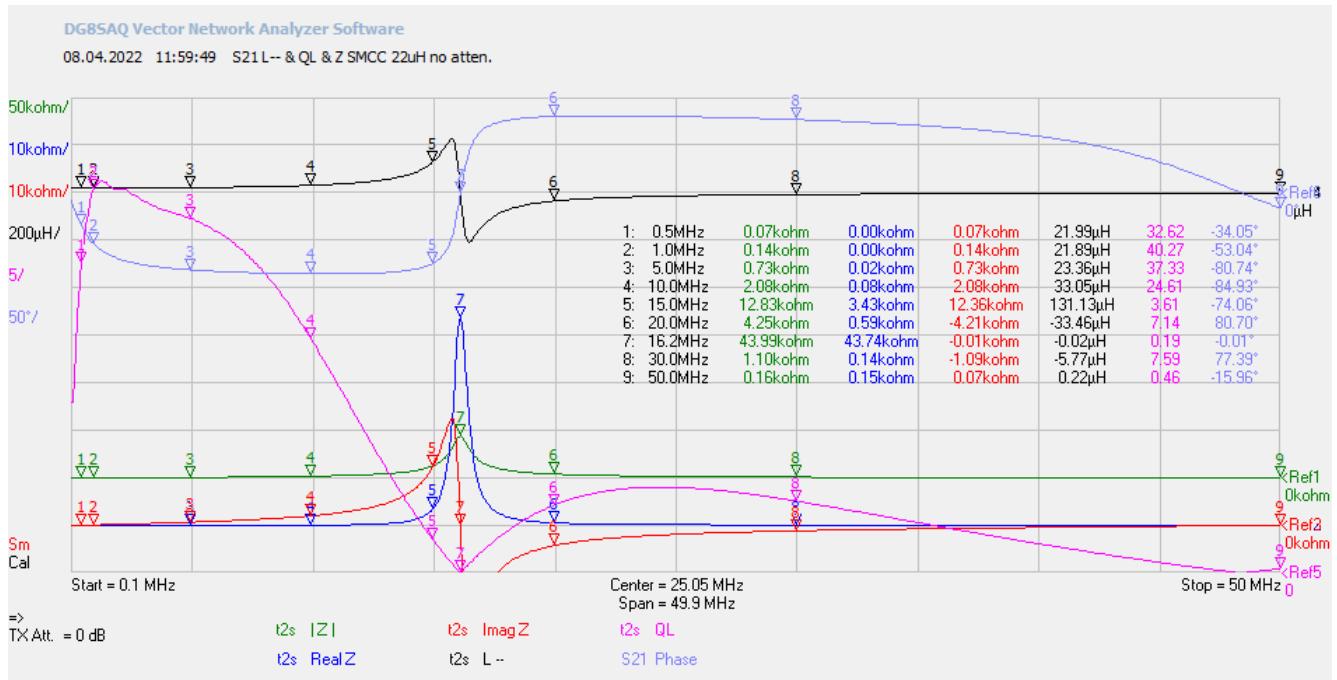



VNWA-Plots S21-Measurements chokes & T-Toroids

DG1KPN & DL6GL

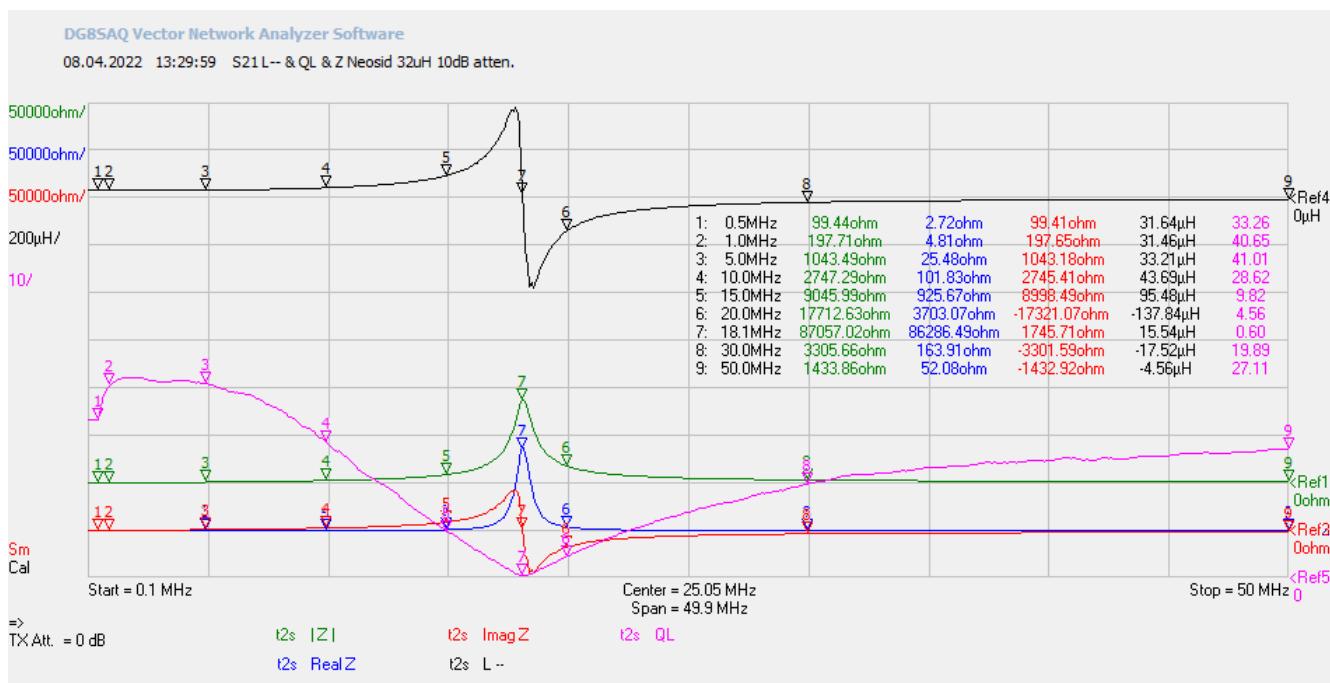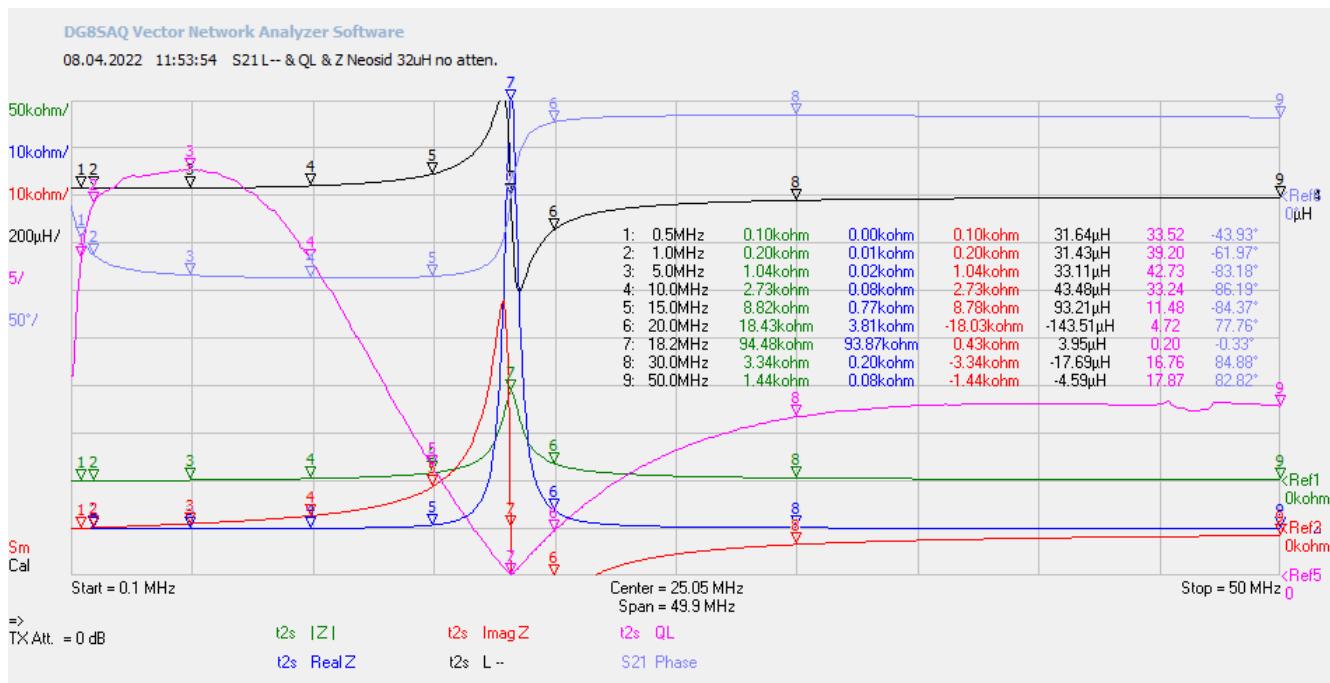



VNWA-Plots S21-Measurements chokes & T-Toroids

DG1KPN & DL6GL

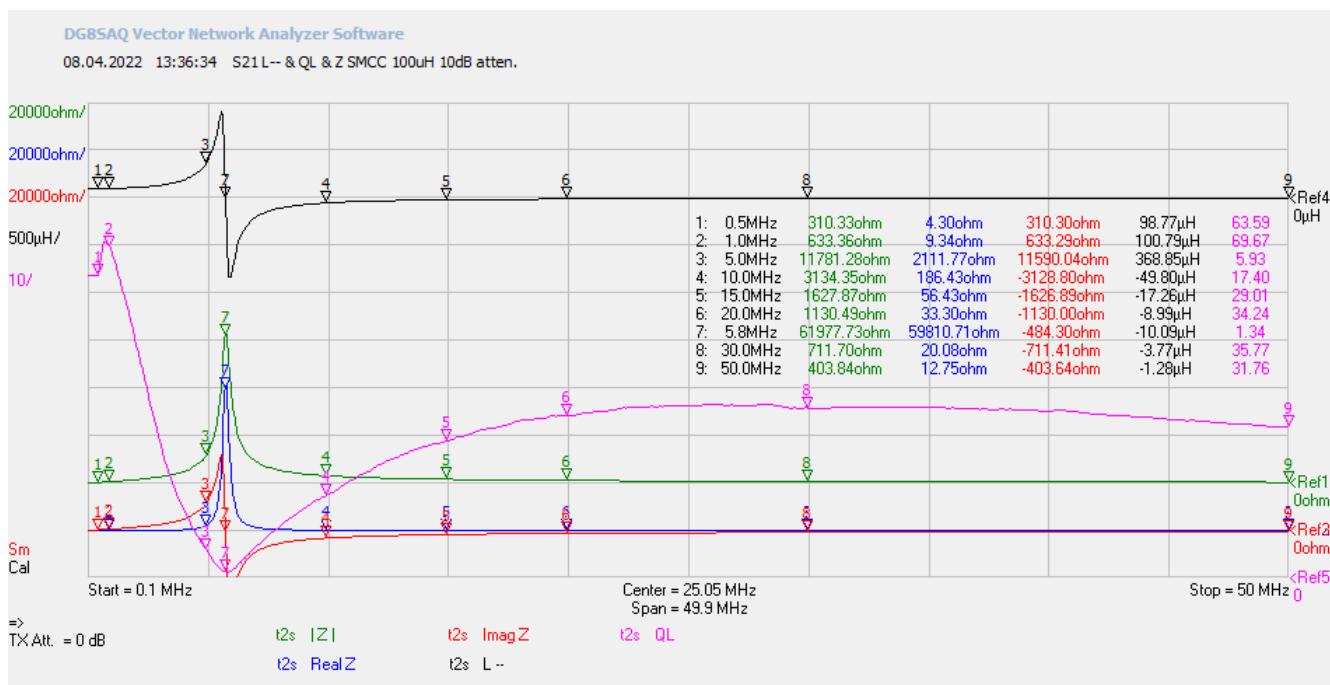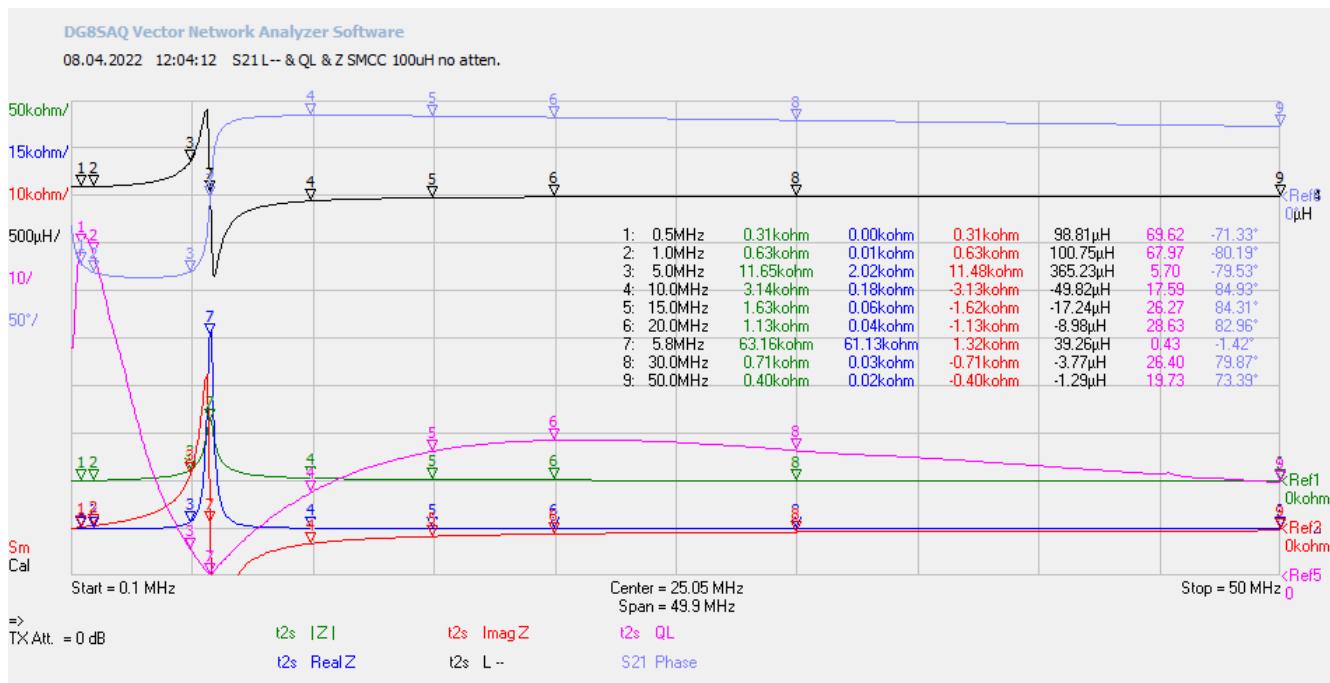



VNWA-Plots S21-Measurements chokes & T-Toroids

DG1KPN & DL6GL

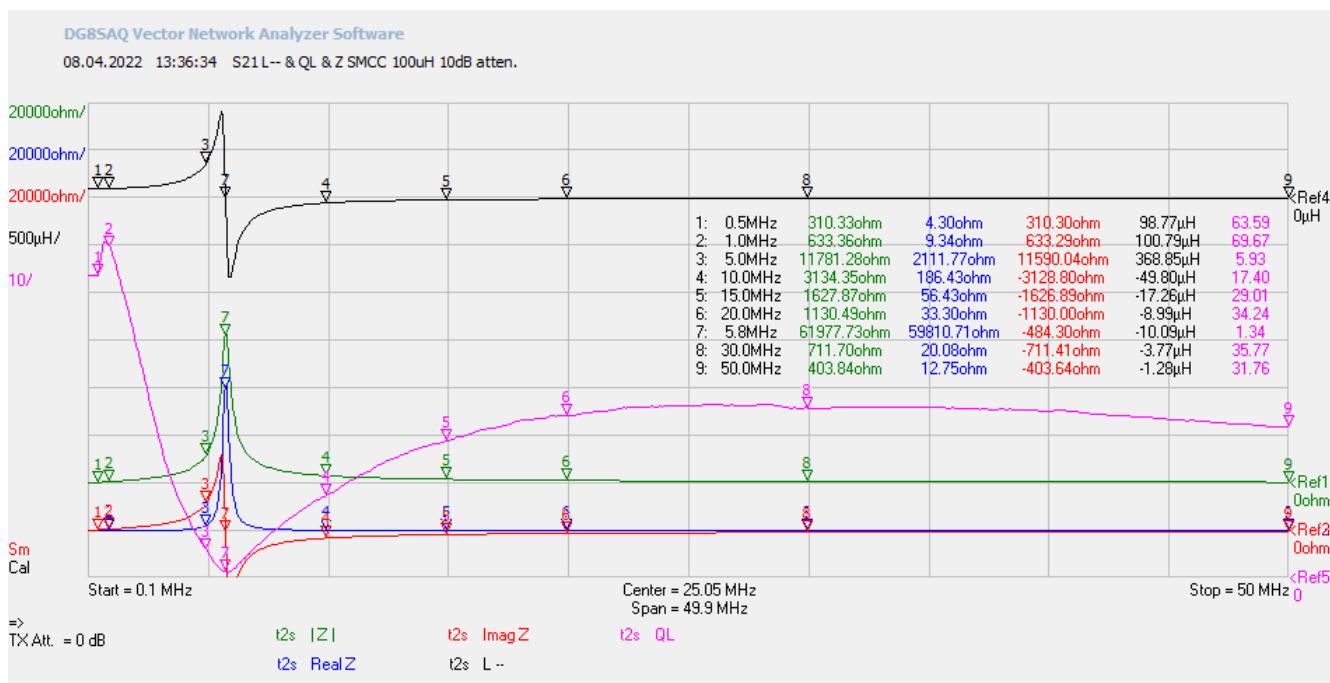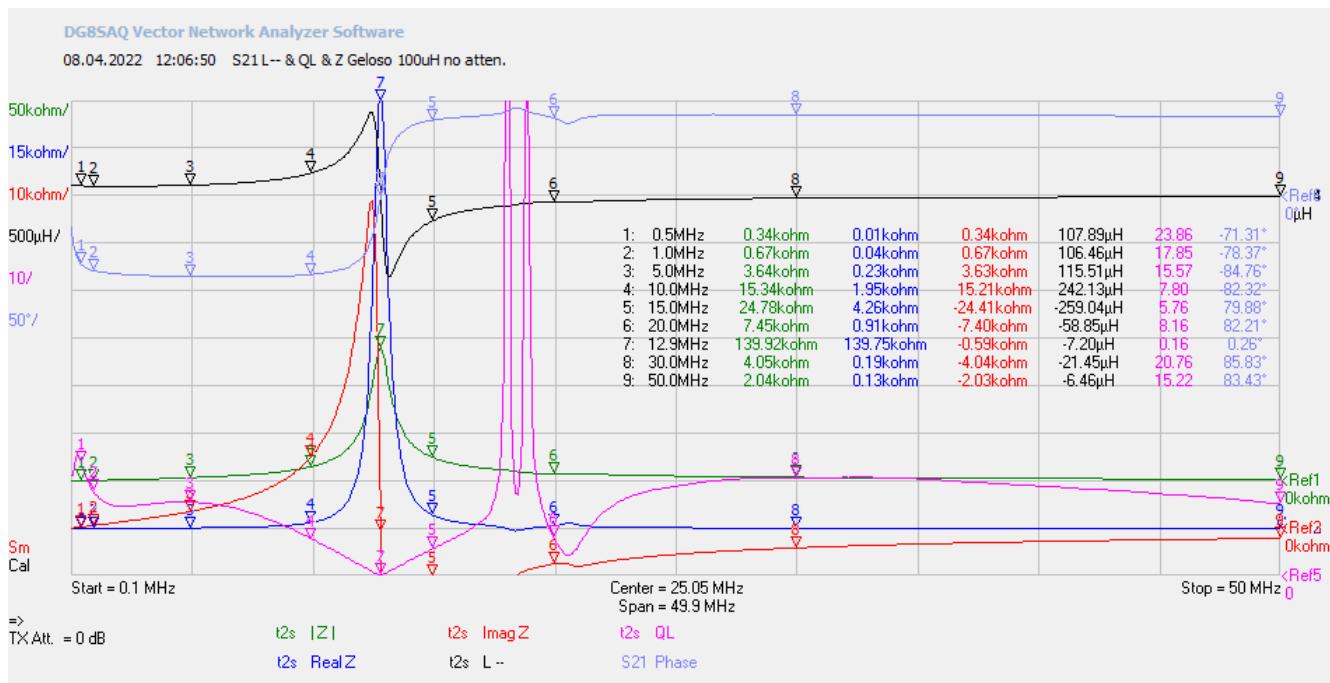



VNWA-Plots S21-Measurements chokes & T-Toroids

DG1KPN & DL6GL

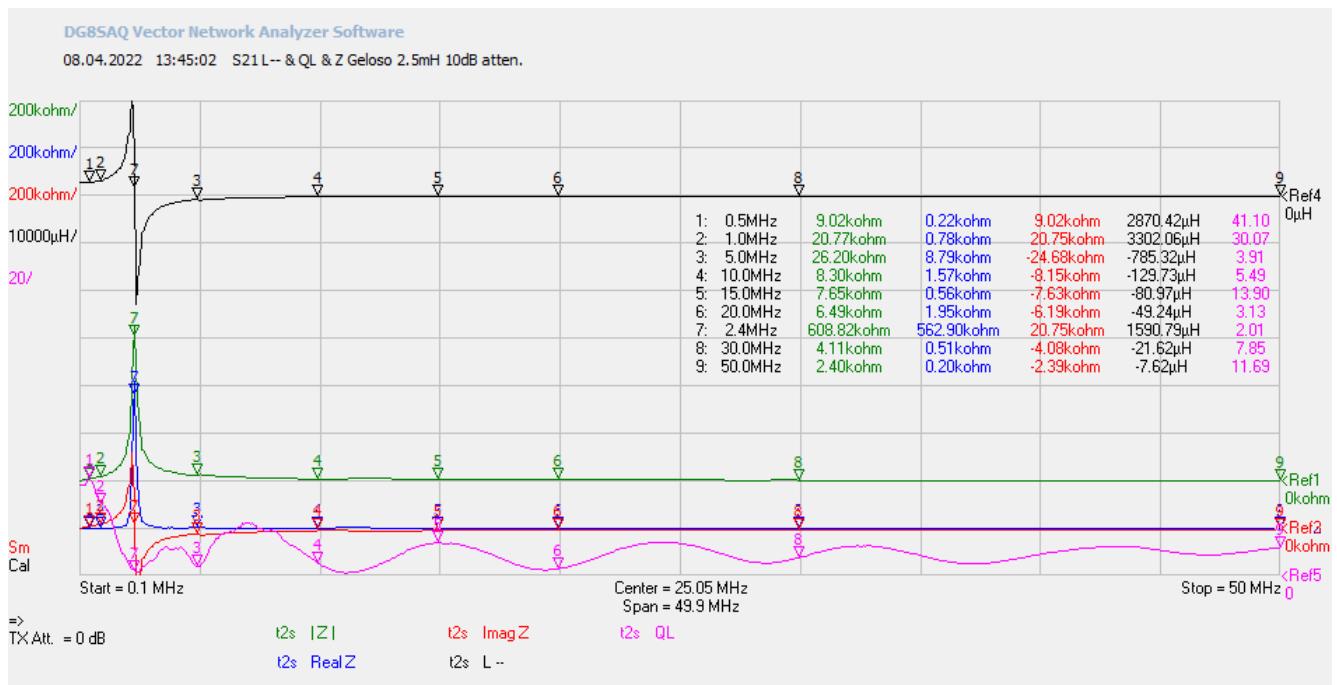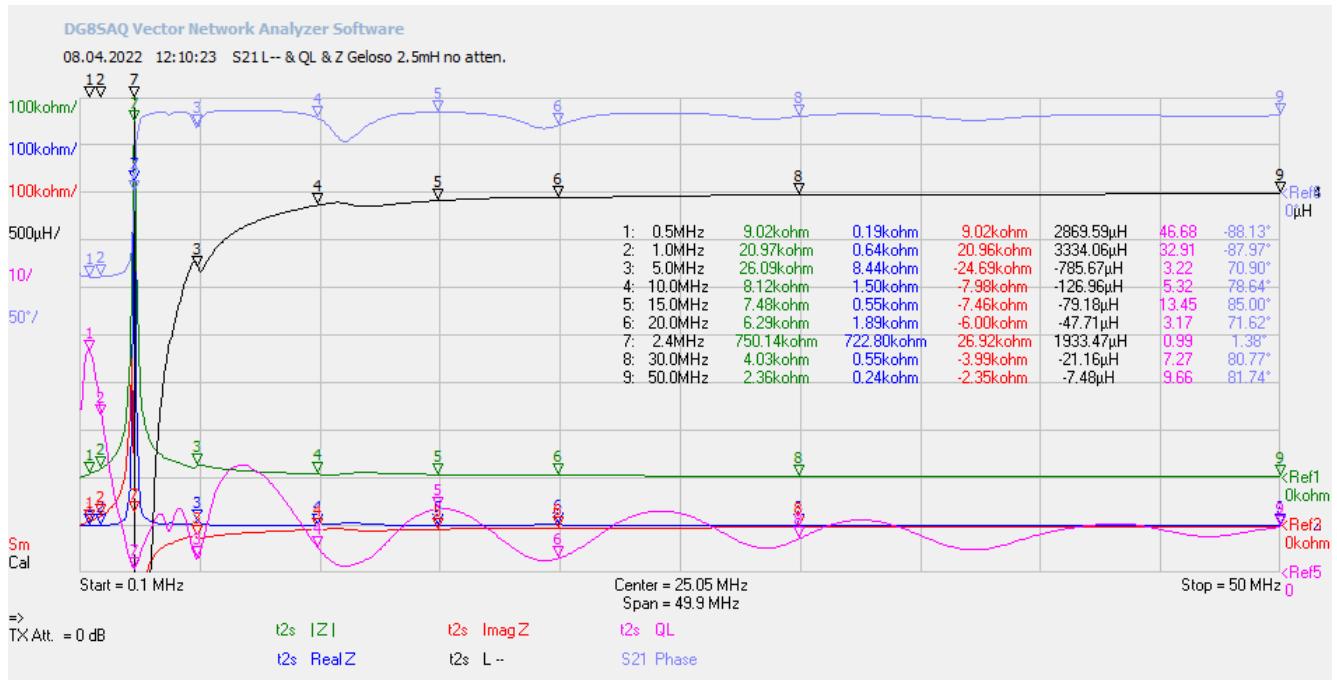



VNWA-Plots S21-Measurements chokes & T-Toroids

DG1KPN & DL6GL

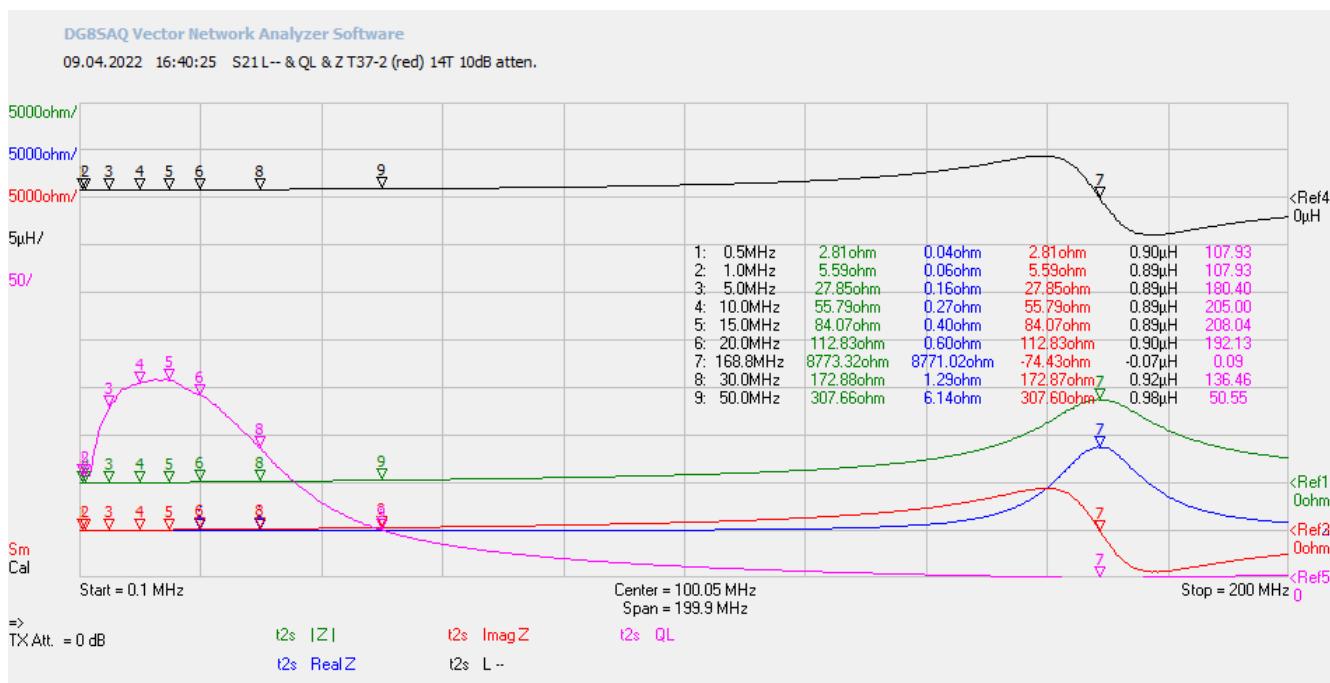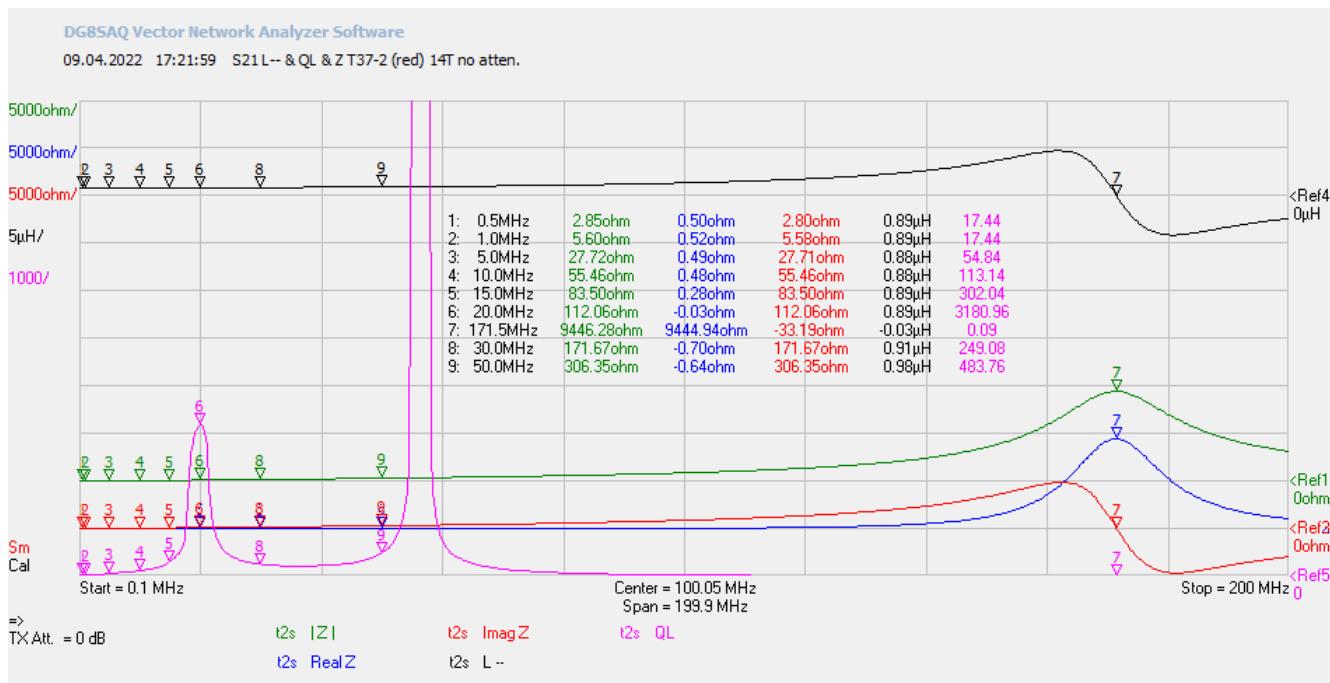



VNWA-Plots S21-Measurements chokes & T-Toroids

DG1KPN & DL6GL

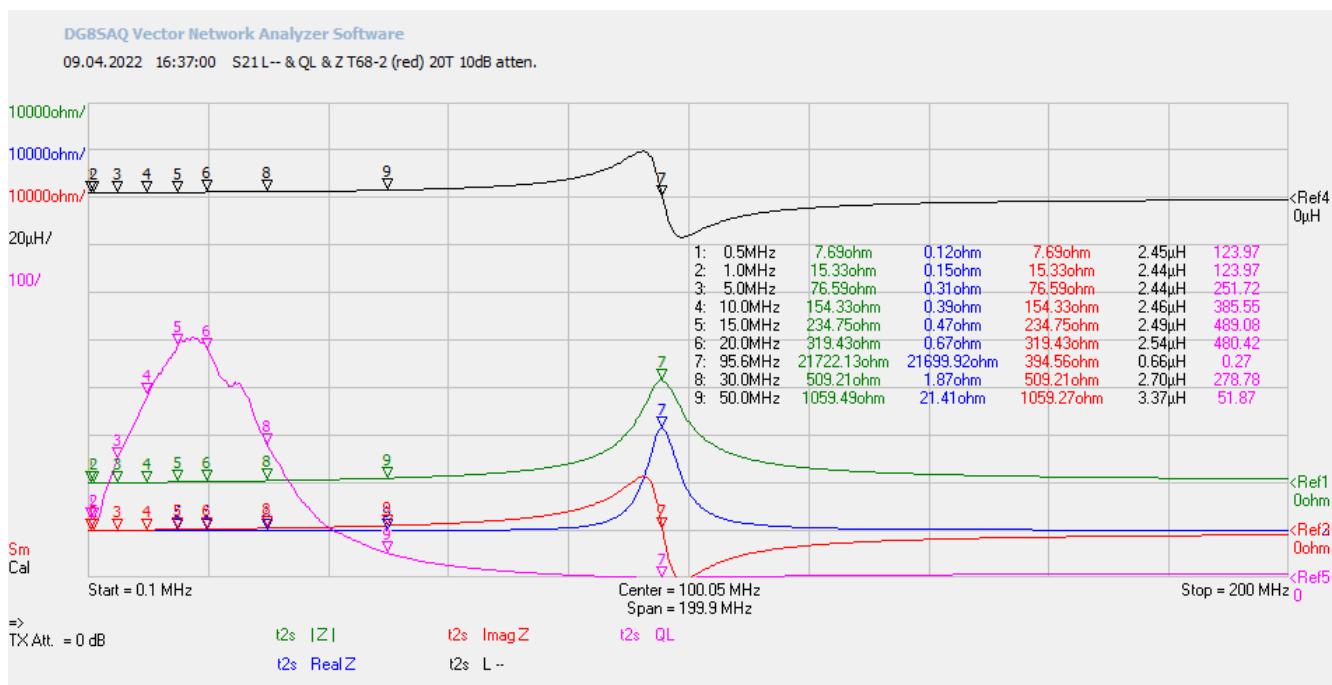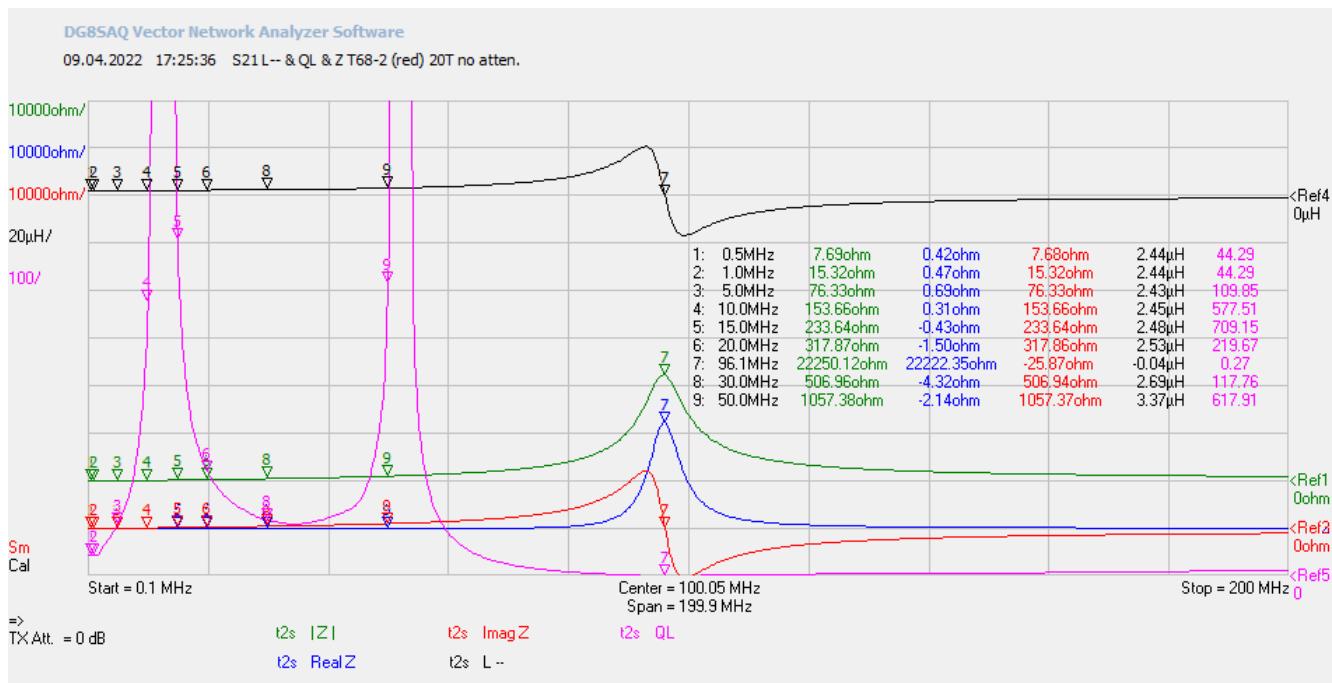

VNWA-Plots S21-Measurements chokes & T-Toroids

DG1KPN & DL6GL

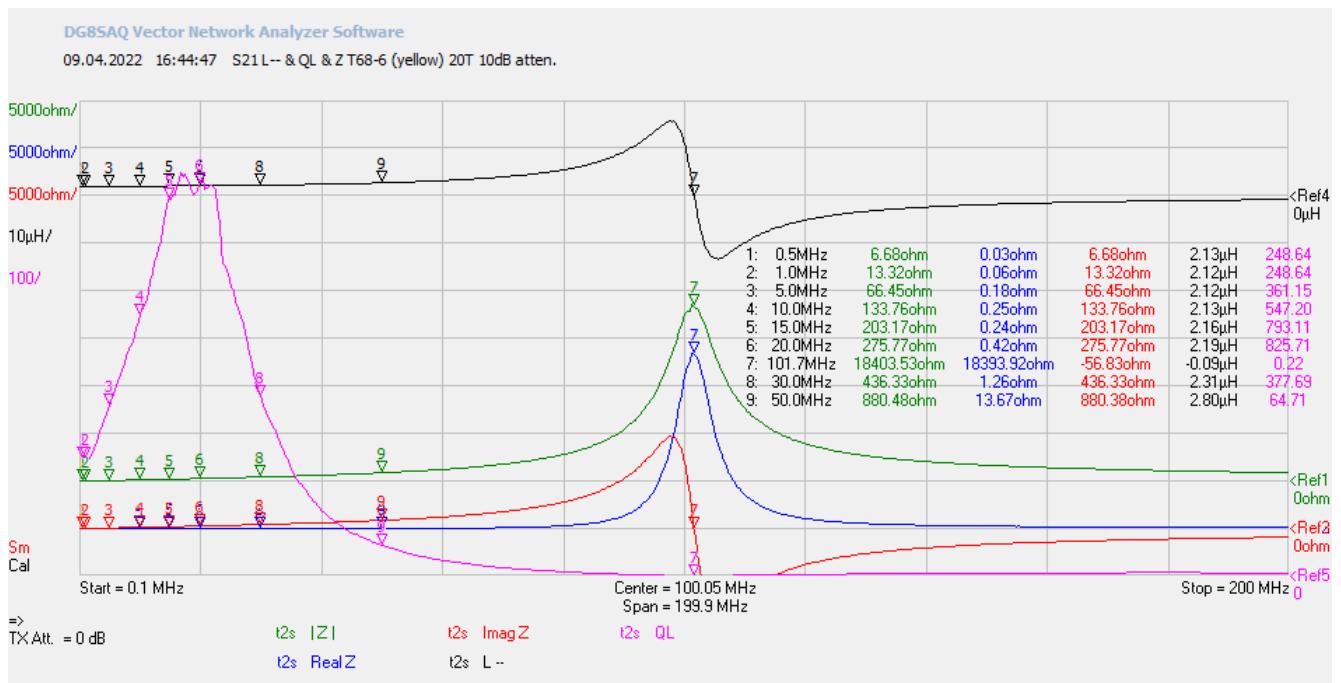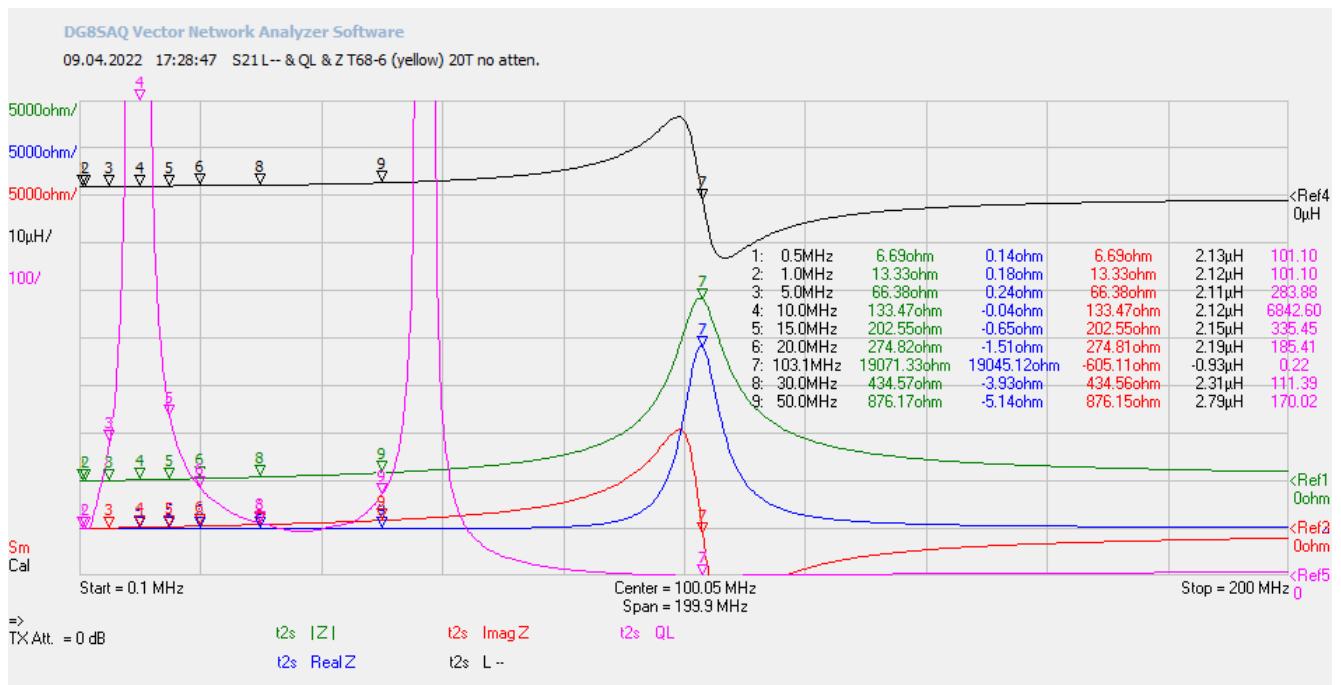

VNWA-Plots S21-Measurements chokes & T-Toroids

DG1KPN & DL6GL

